


# FarmTek®

## Canopy Anchor Kit 103599 Installation Instructions


Use this Canopy Anchor Kit 103599 to anchor your assembled canopy frame. This Canopy Anchor Kit is **not designed** for larger shelters or for use in sand or on hard surfaces such as asphalt or concrete.

**ATTENTION:** Installing ground stakes at every leg of the assembled frame is strongly recommended.


STEP 1: Remove the protective plastic sleeve.

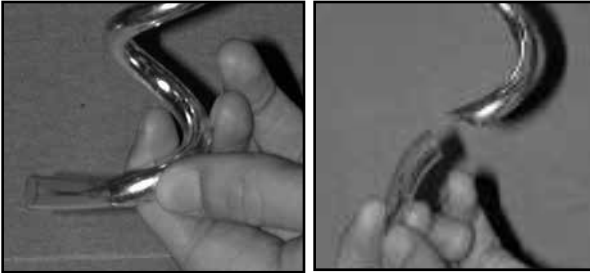


STEP 2: At each leg of the frame, measure 3' in the desired direction and twist a ground stake into the ground.

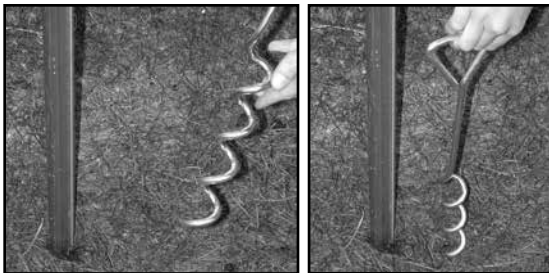


STEP 3: Twist stake clockwise until triangular top touches the ground.

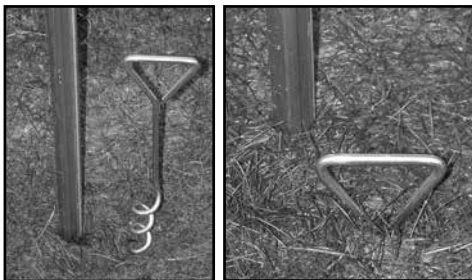

STEP 4: Secure long strap and attached S-Hook to the coupler.

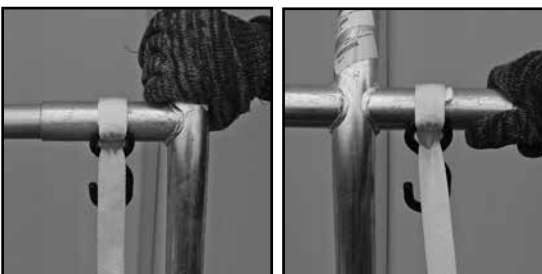

STEP 5: Insert the loose end of long strap into the ratchet and tighten to keep strap in place.

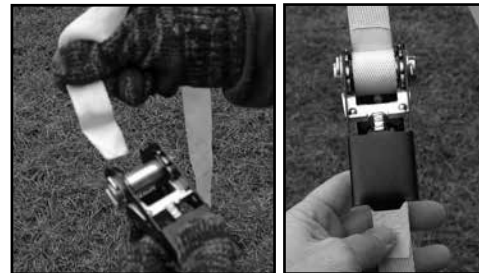

STEP 6: Hook the remaining S-Hook through the triangular top of the ground stake and tighten the ratchet.



**NOTE:** If the strap buildup is too great in the ratchet, loosen the ratchet, remove excess strap, and retighten the ratchet. DO NOT remove too much strap.

STEP 7: Repeat the steps as needed to secure each leg of the assembled frame to a ground stake. **DO NOT OVERTIGHTEN RATCHETS.**

