


PolyMax Grow Tubes

Install Guide For Drip Tape Irrigation

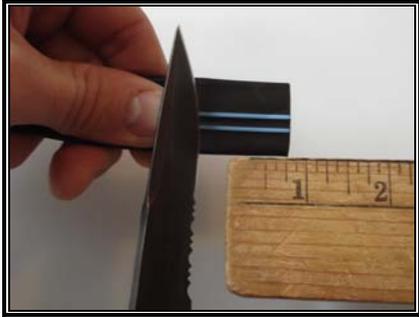

1) Cut off a 1" piece of Drip Tape 109673. When cutting Drip Tape, ensure all cuts are straight and clean.

Fold the last 4" of Tape in half lengthwise.



2) Fold the tape back on itself twice in 1" increments.

Use the 1" cut piece and sleeve it over the end of the tape. This will close the end of the tape.

DO NOT FEED TAPE WITHOUT CLOSING THE END.



3) With your hand or other means, slightly depress a groove in the compost along the top of the Grow Tube where the irrigation will go.

4) Cut a 1” Hole at the end of the Grow Tube where your water source will be. This will be the starting point for your irrigation.

Begin feeding the drip tape from the cut hole and along this groove.



5) If the tape stops while feeding, do not force it. Cut a new 1” hole where the tape has stopped and continue feeding the tape from this spot. Continue in this way until the tape reaches the end of the Grow Tube.



6) Cut one 1” hole at the end of the Grow Tube and pull the drip tape through the end.



7) Connect your hose fitting using the Tap-Loc (109670). Make sure you have a filter (WF1010) and Pressure Regulator (109687) inline prior to the drip tape. This will assure you have clear lines at the right pressure. A full Hose Bib Assembly is recommended, contact us.