

## Commercial Raised Bed (All Lengths)



Greenhouse not included.

### Commercial Raised Bed

106099 (4' x 10')	106102 (4' x 30')
106100 (4' x 15')	106103 (4' x 40')
106101 (4' x 20')	106104 (4' x 50')

©2006

All rights reserved. Reproduction prohibited without permission.


Revision date: July 2006g

## COMMERCIAL RAISED BED ASSEMBLY

These instructions describe the basic steps needed to assemble your commercial raised bed.


**ATTENTION:** Check for underground cables, lines, and pipe before driving the ground posts. If the optional post driver was not purchased, place a block of wood on top of the post when driving the post.

1. Square the site where the raised bed will be assembled and mark the four (4) corners. Use the dimensions of your raised bed during site preparation to accurately mark the corners.
2. Premark four (4) ground post 12" from the top and drive the first post into the site at a place where you want a corner of the raised bed. Use the 12" mark as a guide when driving the post.
3. Measure four (4) feet in the direction you want the width of the raised bed to run and drive the second ground post. *All ground posts are 12" above the ground when properly driven.*

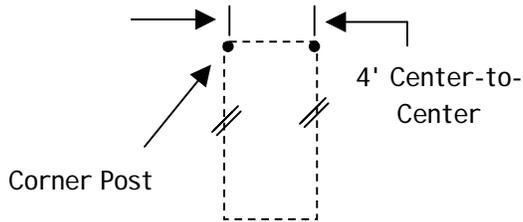

4. Take the heavy-duty liner material, unfold it, and place one edge over the two installed ground posts and stretch the material toward the other end of the bed.

Raised Bed Liner

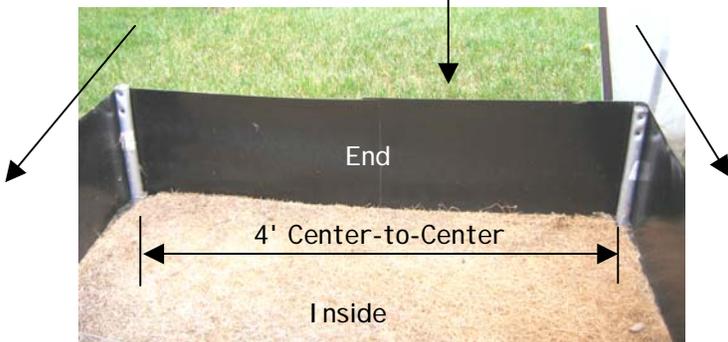


Stretch liner toward the other end of the raised bed.

**ATTENTION:** Position the ground post pockets along the long sides of the raised bed when setting the liner over the corner posts. When the liner is in the proper position, there is a pocket along each long side


at approximately 5' from each corner post, and at 5' intervals for longer raised-bed kits. For example, a raised bed that is 20' long has three (3) ground posts spaced evenly at 5' intervals along each long side.

5. Using the liner as a guide, drive the remaining two (2) corner posts to the required depth (12") and width (4'). Keep the liner as tight as possible when driving the remaining posts.

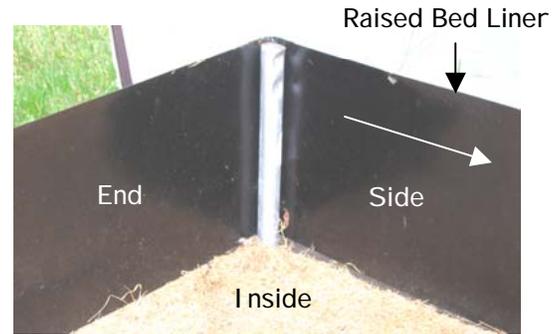

**NOTE:** The liner should now be in place and "wrapped" around the outside of each corner post (as shown above) to form the raised bed.

6. Take another ground post, insert it into one pocket along one long side of the raised bed, verify that the side of the bed is in line with the corner posts on that side, and drive the post into the site.

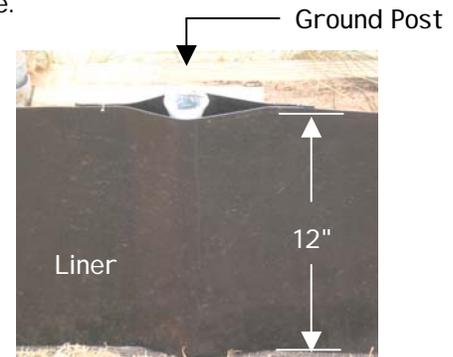

7. Repeat Step 6 for all remaining posts.
8. Fill the raised bed and plant as desired.

