

Aluminum Poly Latch Installation



WARNING!
Wire is sharp. Wear eye protection
when handling and installing.

Installation Procedure


NOTE: Photos show how to install the spring wire (102198) into the single poly latch U-channel (102197). The same procedure also applies to the double U-channel (104211) shown in the photo to the right.

Assistance is required. Evenly stretch the film material over the installed poly latch U-channel. Insert one end of the wire spring (102198) into the end of U-channel to press and secure the film into place.


Work the wire into the U-channel, bending one section at a time until you reach the end. Continue adding wire sections until you reach the end of the U-channel. Overlap the ends of each wire spring 2"-3" each time you add a new section.

Use caution as you wiggle the wire back and forth to fit into the channel. Wear eye protection!

As the spring is installed into the poly latch U-channel, ensure the film material remains stretched evenly along the channel.

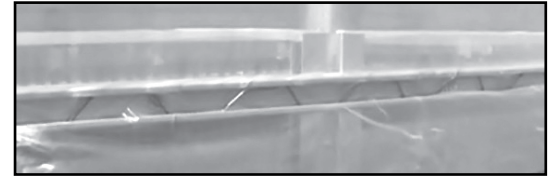

102197 Single U-Channel

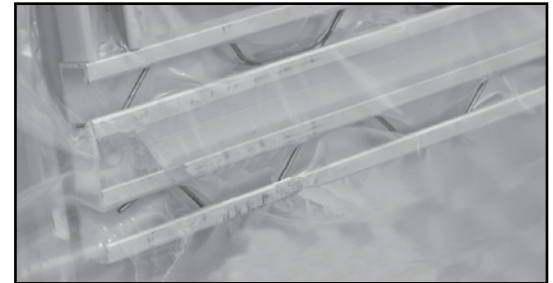

104211 Double U-Channel

